



Feature Description: It can simultaneously check optical insertion loss of fibers, conductivity as well as short-cut/cross over of metal wires by simply connecting the checker to the cable assembly and pressing a button.

The checker can be used to test LEMO connector (3K) as well as TAJIMI connector (OPS). In addition, it also can be used to test other connectors if user purchases optional converters (cable or unit). For the detail, please contact your local representative.

The checker can test maximum 1,000m long cable assembly with two AA batteries .



OPS connector type

LEMO connector type

FURUKAWA ELECTRIC

 Operation procedure 1) Adjust optical power level with dialer 2) Connect the cable assembly and turn the power button on 3) For metal wires, it shows "passes" if all LED indicators are green 4) For optical fibers, it shows "pass" if the LED indicators are lit in the green lamps area If the indicators are only lit in the red and yellow lamps area, it shows the cleaning or maintenance is required How to identify the testing results(reference) 											
Optical loss: NG level is from -20dB to -45dB indicated as red LED Notice level is from -8dB to -19.9dB indicated as yellow LED Pass level is from -0dB to -7.9dB indicated as green LED Blue LED is for initial adjustment											
Metal wire No.1 case: The ground wire is not connected No.2 case: The power wires are shorted together (short circuit)											
	I	No.1 case					No.2 case				
	Pass						Pass				
	Fail						Fail				
		1	2	3	4	-		1	2	3	4
Flash pattern	•	rouble de	etection	in the me	etal line i		time	e above i	mentione	ed flash p	oatterns.

Please refer to the manual for details.

FURUKAWA ELECTRIC INDUSTRIAL CABLE CO., LTD. http://www.feic.co.jp/

HEADQUARTERS

6-48-10, Higashi-Nippori, Arakawa-ku, Tokyo, 116-0014 Japan Fax: +81-3-3801-0581 Tel: +81-3-3803-1151

AMERICAN FURUKAWA, INC. (AFI)

47677 Galleon Drive, Plymouth, MI 48170 U.S.A. Tel: +1-734-446-2200 Fax: +1-734-446-2260 http://www.furukawaamerica.com/

FURUKAWA ELECTRIC EUROPE LTD. (FEEL)

3rd Floor, Newcombe House, 43-45, Notting Hill Gate, London W11 3FE, U.K. Tel: +44-20-7313-5300 Fax: +44-20-7313-5310 http://www.furukawa.co.uk/

FURUKAWA ELECTRIC SINGAPORE PTE. LTD. (FES)

10 Anson Road, #25-08, International Plaza, Singapore 079903 Tel: +65-6224-4686 Fax: +65-6224-2362

The products and their appearances, as described in this brochure, are subject to change for improvement without prior notice. Company and product names appearing in this brochure are registered trademarks or trademarks of respective companies

Export Control Regulations

- The products and/or technical information presented in this publication may be subject to the application of the Foreign Exchange and Foreign Trade Act and other related laws and regulations in Japan.
- In addition, the Export Administration Regulations in Japan. In addition, the Export Administration Regulations (EAR) of the United States may be applicable. In cases where exporting or reexporting the products and/or technical information presented in this publication, customers are requested to follow the necessary procedures at their own responsibility and cost. Please contact the Ministry of Economy, Trade and Industry of Japan or the Department of Commerce of the United States for details about procedures.